





Vith reservation of printing errors and technical chang

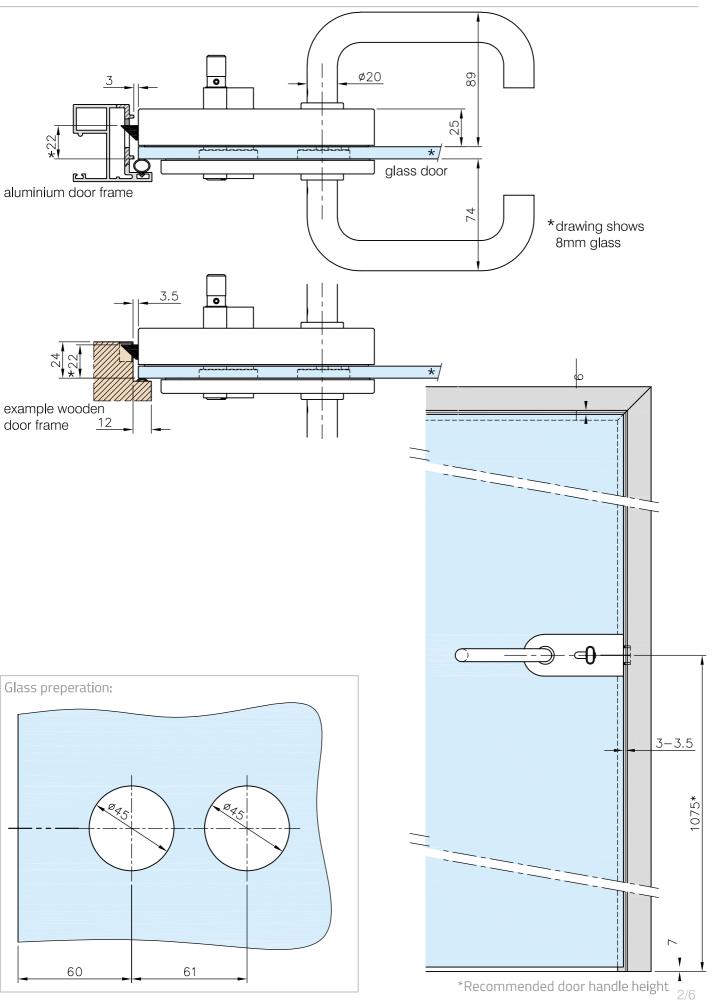


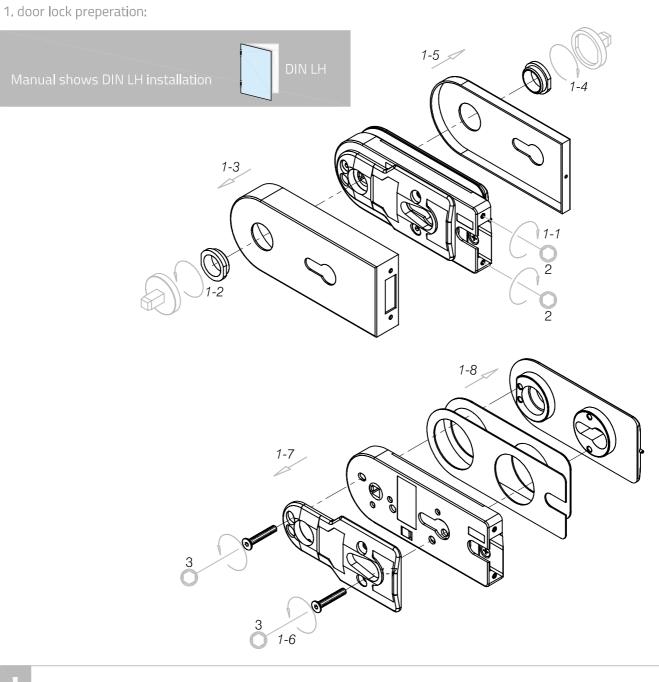

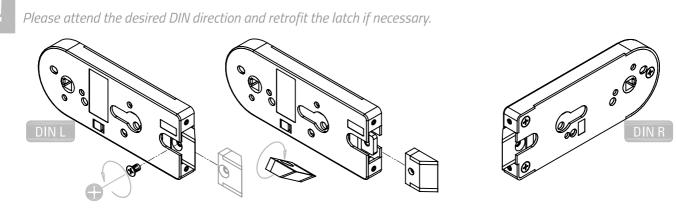


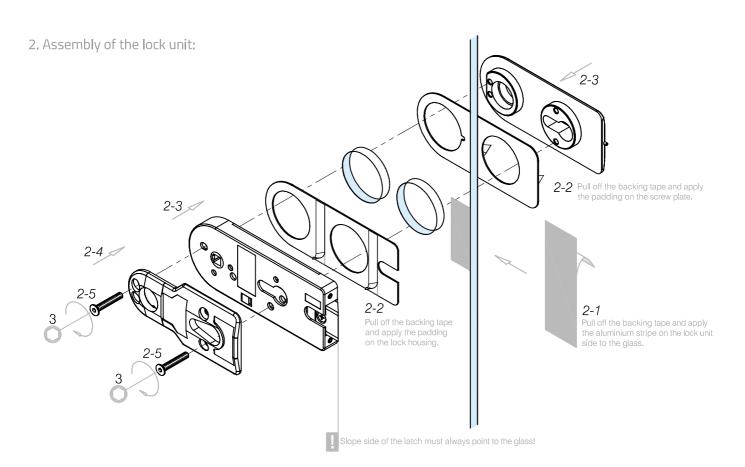

3. Align lock unit to the glass:

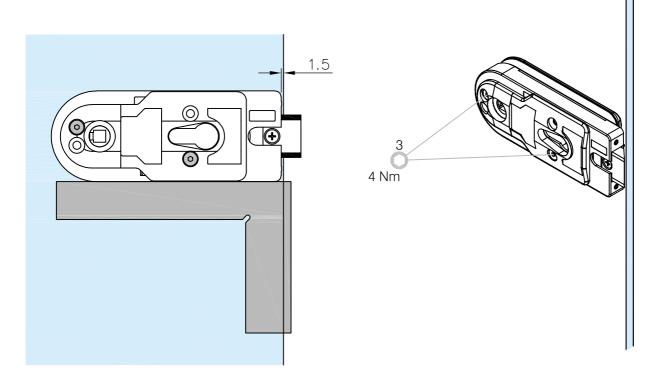


## 4. Fitting the locking cylinder:

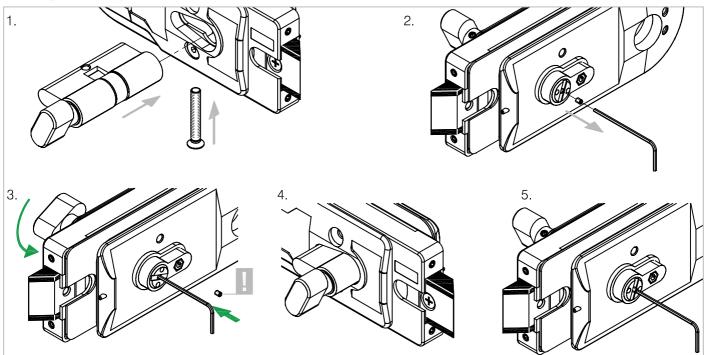

- 1. Place the cylinder in the lock with the knob on the desired side and mount it with the supplied screw.
- 2. Remove the set screw from the cylinder.
- 3. Press the Allen key into the cylinder while turning the knob in the locking direction until you feel resistance.
- 4. Remove the Allen key while simultaneously turning the knob. The lock engages.
- 5. Screw the set screw back into the cylinder and test the correct operation of the cylinder and lock.

5. Assembly of the cover caps:

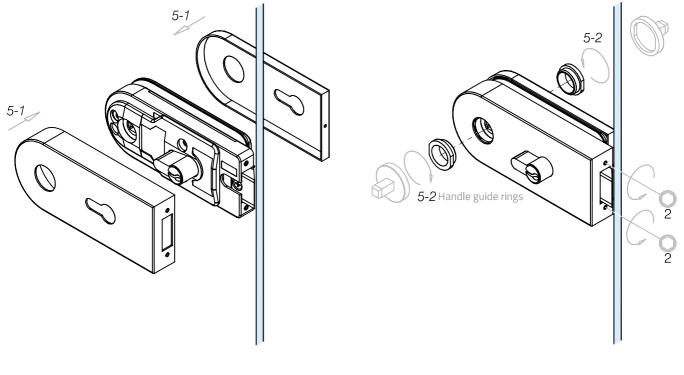

## 6. Assembly of the lever handles:

Your Lever Handles may be diffrent model with diffrent shape or dimensions.

