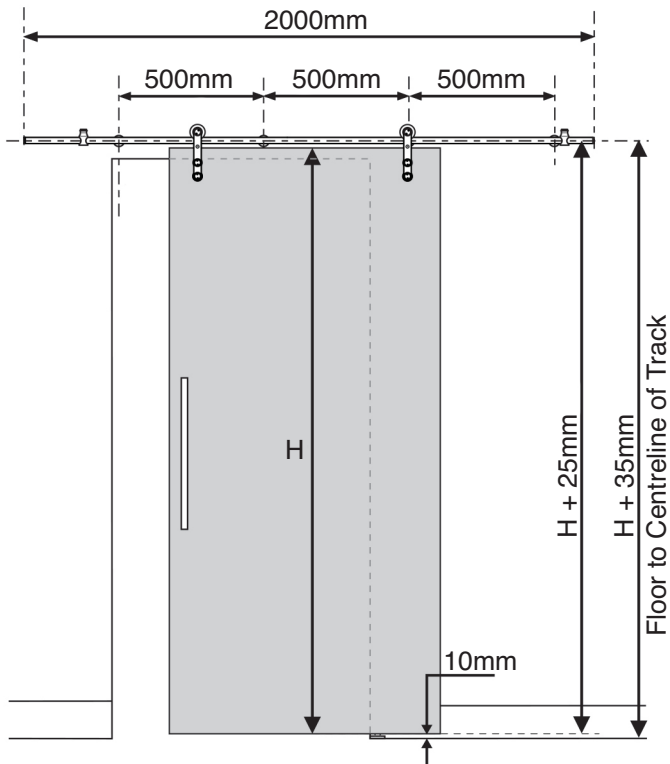


Installation Instructions

Item Code: SLD-4001

PLEASE NOTE: must be installed on a suitably reinforced stud or solid wall.

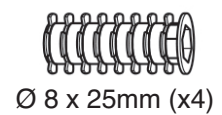
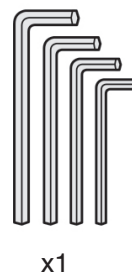
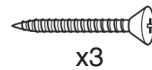
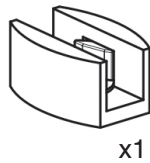
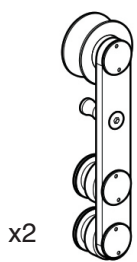
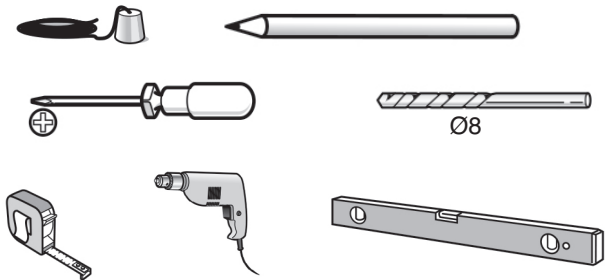


Designed for use with 8mm - 12mm glass door

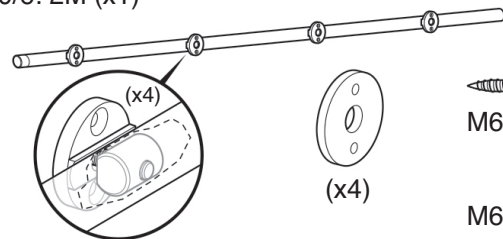
Max. Load Capacity: 90 kg, Max. Door Width: 1000mm

Mounting options: Wall Mounted

Tools required:



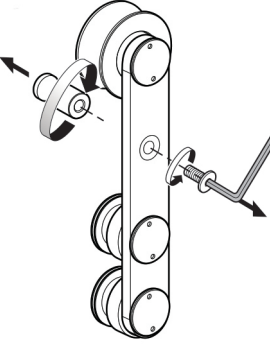
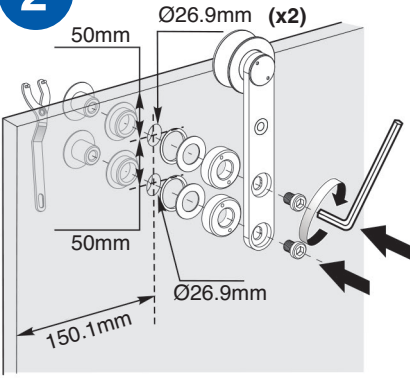
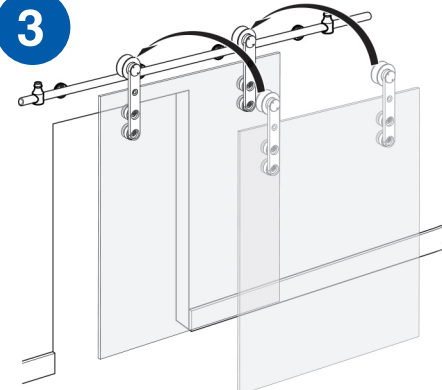
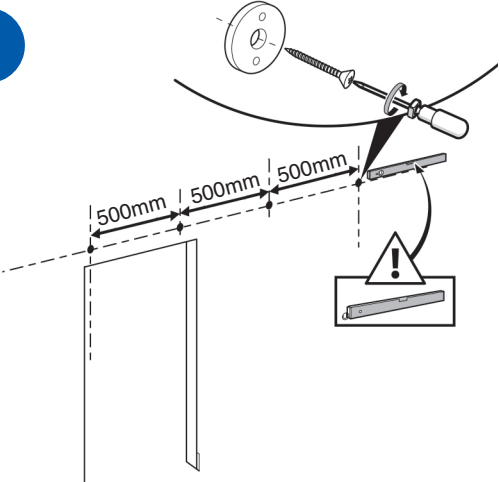
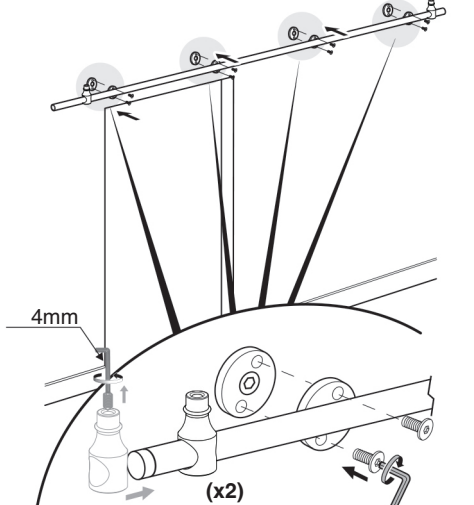
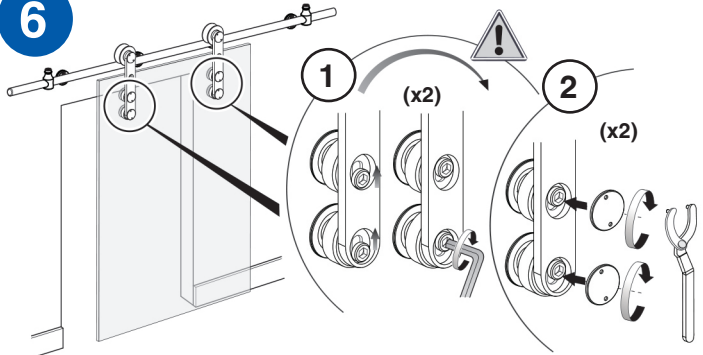
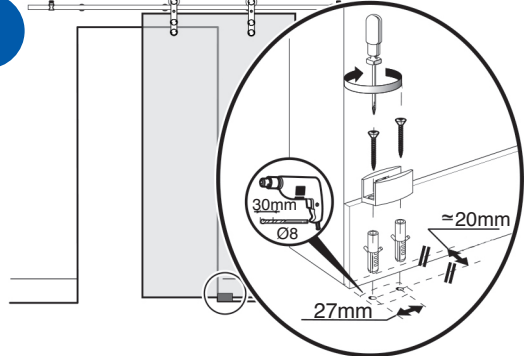
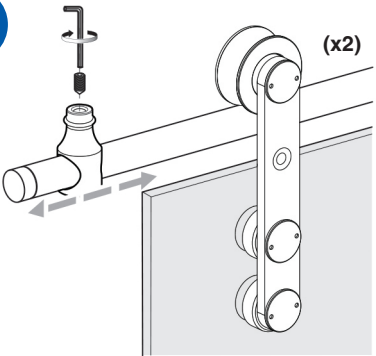
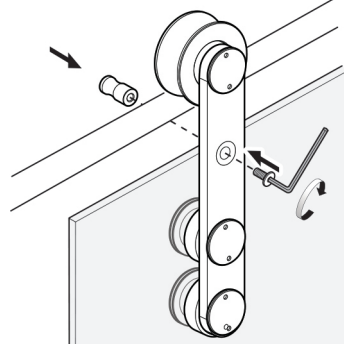
G60/6: 2M (x1)



M6 x 70 (x4)

M6 x 10 (x8)

INSTALLATION INSTRUCTIONS

<p>1</p>  <p>Remove the anti-rise pin from hanger with Allen key provided.</p>	<p>2</p>  <p>Mount hangers to door.</p>	<p>3</p>  <p>Lift the door onto the track.</p>
<p>4</p>  <p>Find the centreline of track as shown on first page. Using a level, mark a horizontal line twice the door width long. Mark bracket screw locations as shown on first page into wall. Attach wall portion of bracket as shown.</p>	<p>5</p>  <p>Attach track to wall brackets as shown. Place on door stops and insert end caps into track ends.</p>	
<p>6</p> 	<p>7</p>  <p>Plumb the door and mark for position of door guide.</p> <p>Mount door guide to floor.</p>	
<p>8</p>  <p>Adjust stops accordingly.</p>	<p>9</p>  <p>Re-attach anti-rise pin into hangers.</p>	